

# SAMMYS<sup>®</sup>

Concrete/Wood Installation Kit



**ONE** *tool to*

**DRILL** *the hole and*

**DRIVE** *the anchor!*

SEE THE  
BACK FOR  
INSTALLATION  
STEPS

→ **Saves time and money**

→ **Convenient**


→ **Easy to use**

Use for installing Sammys and Sidewinders into concrete or extremely hard wood.

Part No.	Description
8122910	Concrete Installation Kit
8116910	Bit (1/4")
8117910	SDS 250 Bit (1/4")
8098910	SL 250 Sleeve
8120910	HEX 250 Bit Receiver (1/4")
8113910	#14 Nut Driver
8114910	#14SW Nut Driver

# Installation Steps

## Hammer Drill into concrete

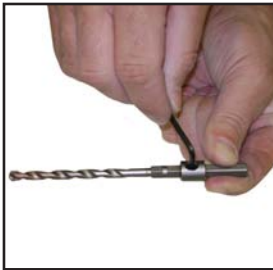

## Rotary Hammer Drill into concrete



## Installing 3/8" diameter into Wood



Note: Pre-drilling may be required for the 3/8" diameter Sammy